



技

WAZA

LF-7000 series
from TECHNO ALPHA
a new generation of
handler equipment
for today's most
challenging device.
In continuation of our
tradition of innovation and
technology leadership,
performance, productivity,
reliability, and ease of use.

LF-7000 series
products deliver the
highest levels of speed,
for reduced cost of
ownership.

LF-7000 series
from TECHNO ALPHA
has the most reliability
in semiconductor
equipment.

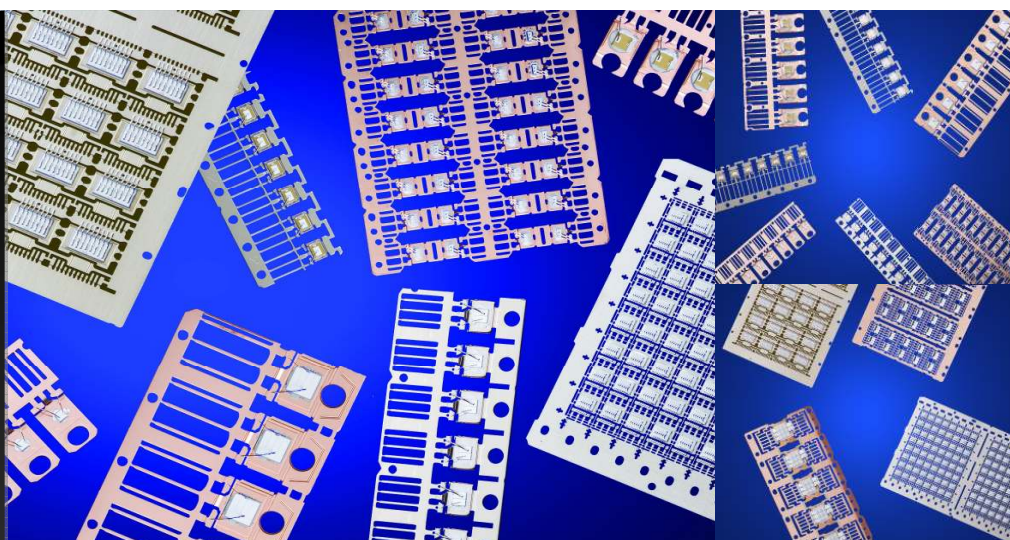

LF-7000 series®


リードフレーム専用の供給・収納装置 LOADER / UN-LOADER

“幅広いマガジン仕様”に対応した
リードフレーム 供給・収納装置

リードフレーム用ローダ・アンローダ「7000Xシリーズ」は幅広い仕様に対応した標準装置です。ワイヤボンダ装置など、ディスクリート分野で培った経験をもとに、操作性やメンテナンス性にも優れた装置となっています。また自動車業界用のハイレベルな安全仕様にも対応可能です。

<仕様>

| 項目 | 仕様 |
|-----------|--|
| 装置寸法・重量 | 600(W)x1300(D)x900(H) |
| 重量 | 120kg |
| 電源 | 単相:200V もしくは 100V |
| 対応マガジンサイズ | 幅: 20-115mm 長さ: 115-310mm 高さ: 50-215mm |
| オプション | エリアセンサ/安全ドア・カバー/上位サーバーとの通信/その他 |
| 特徴 | 幅広い仕様に対応し、容易に導入可能 |

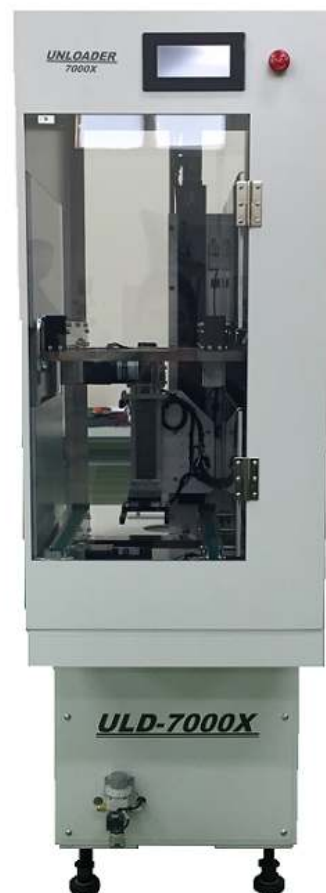

LF-7000 series®

TECHNO ALPHA 
テクノアルファ株式会社

技

WAZA

High Performance LOADER and UM-LOADER




Features



マガジン搭載

ワイドなマガジン搭載スペースを確保し、カスタマイズも承ります。

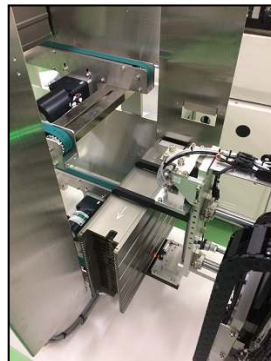

マガジクランプ

マガジンをしっかり固定し、リードフレームのみ出しも防止します。



安全仕様対応

お客様に合わせたハイレベルな安全仕様にも対応します。

Other Information

カスタム搬送装置からライン構築まで

標準のリードフレーム用ローダ・アンローダ以外にも、お客様のラインに合わせた特殊搬送も製作可能です。モジュールや基板などの搬送装置を、お客様の仕様に合わせて製作し、インラインなどのライン全体の構築もご提案させていただきます。



基板搬送装置

多品種対応の搬送装置です。自動でレーン幅やピッチを変更でき、特殊なマガジンにも対応しています。また基板の向きなども変える機構も付いています。



ライン構築

様々な装置をつなぐカスタマイズ搬送を製作致します。また搬送以外でも、特殊な製造装置、検査装置の製作まで幅広く対応可能です。

Service

充実したサービス体制を構築

サービスは東京、神奈川、名古屋の3拠点体制を構築してしますので、装置のトラブルにも迅速に対応いたします。

LF-7000 series®

TECHNO ALPHA

テクノアルファ株式会社

〒141-0031
東京都品川区西五反田2-27-4
明治安田生命五反田ビル
tel 03-3492-7472
<http://www.technoalpha.co.jp>